# PIPER SUPERCUB PARTS

#### **PA-18 SUPERCUB PARTS**



	WINDOW	

#### **AFT LOWER WINDOW CHANNEL**

Left Side ......P/N 05-00492

#### FRONT WINDOW CHANNEL

Left Side ......P/N 05-00493

## **UPPER WINDOW FORMER**

Left Side ......P/N 05-00494

## **FORWARD VERTICAL WINDOW CHANNEL**

Left Side ......P/N 05-00495

# AFT VERTICAL WINDOW CHANNEL

Left Side ......P/N 05-00496

#### **PIPER PA-18 FAIRINGS**



#### Examples of Fairings are for Reference Only!

Examples of Fairings are for Reference Only:						
Description	A/C Model	Part No.	Price			
Upper Wing Root Fairing	Piper PA-14, PA-15, PA-16, PA-17, PA-18, PA-20, PA-22	05-14961				
Bottom Front Wing Root Fairing - Left	Piper PA-18	05-07572				
Bottom Front Wing Root Fairing - Right	Piper PA-18	05-07573				
Rear Bottom Fairing - Left	Piper PA-18	05-07574				
Rear Bottom Fairing - Right	Piper PA-18	05-07576				
Wing Root Fairing - Left	Piper PA-18	05-07579				
Wing Root Fairing - Right	Piper PA-18	05-07581				
Fairing Attachment Plate - Left	Piper PA-18	05-07582				
Fairing Attachment Plate - Right	Piper PA-18	05-07583				

# ADDITIONAL FAA-PMA PARTS FOR PA18 SUPERCUB

Description	Part No.	Price
Piper hinge - half	05-00510	
Interior tab	05-00511	
Pulley bracket	05-00512	
Pulley bracket	05-00513	
Forward elevator pulley half	05-00514	
Flap lever hinge - weld on fuselage or seat	05-00516	
Shock strut	05-00518	
Fuel selector bracket	05-00520	
Tailspring bracket	05-00521	
Tailspring mount pad - forward	05-00522	
Aileron pulley bracket	05-00523	
Floorboard tabs	05-00525	
Cabane Vee	05-00526	
Elevator horn	05-00530	
Rudder horn blank	05-00531	
RH Rudder Pedal Assembly	05-00532	
LH Rudder Pedal Assembly	05-00533	
RH Brake Pedal Assembly	05-00534	
LH Brake Pedal Assembly	05-00535	
3/8" U Channel - 6' Lengths	05-04564	
Exhaust stack rear - PA18 150 HP	05-07605	
Muffler Assembly - PA18 150 hp	05-00544	

#### **PA18 LANDING GEAR**



Specify right or left side. 11/4 axle, heavy duty; FAA-PMA P/N 05-00489 11/2 axle, heavy duty; FAA-PMA

11/2 axle, heavy duty; FAA-PMA LEFT.......P/N 05-00490 1-1/2 Axle, Heavy Duty, FAA/PMA ......RIGHT.....P/N 05-11813

LANDING GEAR AVAILABLE - CALL FOR QUOTE!



# REAR TORQUE TUBE SUPPORT & BEARING

Weld on; FAA-PMA ......P/N 05-00497



 
# FRONT TORQUE TUBE SUPPORT & BEARING

Weld on; FAA-PMA ......P/N 05-00498



# HEAVY DUTY 5/8 LIFT STRUT FORK

Rolled threads, stainless, heat treated. P/N 05-00501



## TOP DECK SUPERSTRUCTURE

Top Deck ..... P/N 05-00502 \$30 CRATE FEE



# **JACK SCREW TOWER**

P/N 05-00503 **\$20 CRATE FEE** 



#### **MUFFLER BAIL U452-093**

Muffler Bail Welded inside muffler outlet to guard against Flame Tube failure and obstruction of exhaust outlet.

P/N 05-02150



## TAIL REPAIR SECTION - 4'

Without Jack screw tower.
P/N 05-00504
With Jack screw tower
P/N 05-00505
\$20 CRATE FEE



# FUEL QUANTITY TRANSMITTER FOR PIPER AIRCRAFT

McFarlane fuel quantity transmitters are a direct replacements for originally installed Stewart Warner type fuel quantity transmitters. Eliminates the need for expensive transmitter conversion kits that require replacement of fuel gauges and wiring. These transmitters are engineered to be compatible with the original fuel quantity gauge and wiring which uses time proven technology and reliability.

time proven technology and reliability.

Each transmitter is manufactured using the new Stewart Warner "thick film ceramic" resistor technology. The benefits are longer life and increased accuracy. All components are thoroughly tested to ensure reliable operation.

Note: Does NOT include screw/seal assembly or

gasket (see accessories to order separately). MC68101-02 kit ......P/N 05-04874

Accessories - See our website for application information. Transmitter MC68101-02 ......P/N 05-04870