

# BERINGER WHEEL & BRAKE PARTS



## BERINGER WHEEL SERVICE PARTS

Description	Beringer P/N	Part Number	Price
Outer bearing - Individual	B-BE-001	06-04287	---
Inner bearing - Individual	B-BE-002	06-04286	---
Bearing - Individual	B-BE-003	06-04285	---
Bearing - Individual	B-BE-007	06-04284	---
Bearing - Individual	B-BE-008	06-04283	---
Bearing - Individual	B-BE-013	06-04282	---
Bearing - Individual	B-BE-014	06-04281	---
Circlip - Individual	C-AL-001	06-04278	---
Circlip - Individual	C-AL-002	06-04277	---
Circlip - Individual	C-AL-003	06-04276	---
Circlip - Individual	C-AL-006	06-04275	---
Circlip - Individual	C-AL-008	06-04274	---
Circlip - Individual	C-AL-009	06-04273	---
Circlip - Individual	C-AL-011	06-04272	---
Wheel clip - Individual	CLP-001(B)	06-04182	---
Wheel clip - Individual	CLP-002(C)	06-04271	---
Wheel clip - Individual	CLP-002(D)	06-04270	---
Wheel clip - Individual	CLP-004(A)	06-01654	---
Wheel clip - Individual	CLP-006(A)	06-04269	---
Wheel O-ring - Individual - 5" Wheel	J-JTR-006N	06-01994	---
Wheel O-ring - Individual - 6" Wheel	J-JTR-007N	06-01995	---
Wheel O-ring - Individual	J-JTR-009N	06-04253	---
O-ring - Individual	J-JTR-015N	06-04252	---
Wheel O-ring - Individual	J-JTR-016N	06-04251	---
Valve O-ring - Individual	J-JTR-017N	06-01996	---
Wheel O-ring - Individual	J-JTR-019N	06-01992	---
O-ring - Individual	J-JTR-023N	06-04250	---
O-ring - Individual	J-JTR-024N	06-04249	---
Lipseal - Individual	J-JBE-002N	06-04256	---
Lipseal - Individual	J-JBE-004N	06-04255	---
Lipseal - Individual	J-JBE-005N	06-04254	---
Screw M5x20/Vis M5x20	V-CHC-052	06-04213	---
Screw CHC M6x35	V-CHC-030	06-04214	---
Wheel assy screw -Individual	V-CHC-020	06-04215	---
Wheel assy screw -Individual	V-CHC-015	06-04216	---
Clip screw - Individual	V-CHC-010	06-04217	---
Wheel assy screw - Individual	V-CHC-009	06-04218	---
Wheel assy screw - Individual	V-CHC-008	06-04219	---
Clip screw - Individual	V-CHC-005	06-04220	---
Wheel assy screw - Individual	V-CHC-004	06-04221	---
Wheel assy screw - Individual	V-CHC-003	06-04222	---

## BERINGER SENSAR WHEEL TIRE PRESSURE MONITORING SYSTEM

Description	Beringer P/N	Part Number	Price
5" - Experimental Use Only	TP-005	06-04226	---
6" - Experimental Use Only	TP-006	06-04224	---
5" - Certified - For use with STC	TP-005 Certified	06-04225	---
6" - Certified - For use with STC	TP-006 Certified	06-04223	---



## BERINGER BRAKE SERVICE PARTS

Description	Beringer P/N	Part Number	Price
Back stop - Individual	BTR-001(C)	06-04280	---
Back stop - Individual	BTR-002(C)	06-04279	---
Brake disc - (Package as Pair)	DSC-006(B)	06-01119	---
Brake disc - (Package as Pair)	DSC-008(A)	06-01649	---
Brake disc - (Package as Pair)	DSC-008.2(A)	06-01651	---
Brake disc - (Package as Pair)	DSC-009.3(A)	06-01653	---
Brake disc - (Package as Pair)	DSC-009.4(A)	06-04268	---
Brake disc - (Package as Pair)	DSC-009.5(A)	06-04267	---
Brake disc - (Package as Pair)	DSC-011(B)	06-04266	---
Brake disc - (Package as Pair)	DSC-012(A)	06-04265	---
Brake disc - (Package as Pair)	DSC-014(A)	06-04264	---
Brake disc - (Package as Pair)	DSC-015(A)	06-04263	---
Fixation Pin	PIO-006(A)	06-04241	---
Fixation Pin	PIO-007(A)	06-04240	---
Brake Pad - Individual	PQT-003(A)	06-04239	---
Brake Pad - Individual	PQT-004(A)	06-04238	---
Brake disc - (Package as Pair)	PQT-008(B)	06-04237	---
Brake disc - (Package as Pair)	PQT-009(A)	06-03027	---
Brake disc - (Package as Pair)	PQT-010(A)	06-01991	---
Brake disc - (Package as Pair)	PQT-012(C)	06-04236	---
Brake disc - (Package as Pair)	PQT-013(C)	06-04235	---
Brake disc - (Package as Pair)	PQT-014(C)	06-04234	---
Piston - Individual	PSE-002(A)	06-04233	---
Piston - Individual	PSE-003(A)	06-04232	---
Piston - Individual	PSE-004(A)	06-04231	---
Piston - Individual	PSE-005(A)	06-04230	---
Piston seal - Individual	JNT-002N(A)	06-04248	---
Piston seal - Individual	JNT-003E(A)	06-04247	---
Piston seal - Individual	JNT-004N(A)	06-04246	---
Piston seal - Individual	JNT-006E(A)	06-04245	---
Piston seal - Individual	JNT-006N(A)	06-04244	---
SCREW M8X30 TORX HEAD	VIS-029(A)	06-04205	---
Screw	VIS-022(A)	06-04206	---
Screw - Individual	VIS-015(A)	06-04207	---
Screw - Individual	VIS-010(A)	06-04208	---
Screw	VIS-008(A)	06-04209	---
Brake assy screw - Individual	VIS-006(A)	06-04210	---
Brake assy screw - Individual	VIS-003(A)	06-04211	---
Screw CHC M8x41	VIS-002(B)	06-04212	---

LG

## BERINGER TOOLS FOR TIRES & BRAKES

Description	Beringer P/N	Part Number	Price
Tire mounting tool for 6 Inch HE Wheel	OT-001	06-04288	---
Tire mounting tool for 6 Inch SL-HL-LE Wheels	OT-001.1	06-04289	---
Tire mounting tool for 5 Inch Wheel	OT-002	06-01109	---
Tire mounting tool for 8 Inch Wheel	OT-012	06-04290	---
Brake Bleeding Kit	ONC01	06-04291	---
Extended socket for RV14 Axle Nut	OPA08	06-04292	---